

## 2010 FORD F-350 Tow Rating

| Engine:     | 6.4L V8 TURBO DIESEL | Transmission: | MANUAL |
|-------------|----------------------|---------------|--------|
| Drive:      | 4WD                  | Tire Size:    | N/A    |
| Cab:        | REGULAR              | Package:      | N/A    |
| Bed:        | N/A                  | Wheel Base:   | 137"   |
| Axle Ratio: | 4.00                 | Rear Wheels:  | DUAL   |


## **HOW MUCH CAN I TOW WITH A GOOSENECK?**

Boasting about towing a heavy load is common in this day and age. It's the focus of nearly every truck commercial. But the answer to how much you can safely tow isn't always easy to find and there are many variables. Nonetheless, weight ratings are important to understand and follow.

Truck manufacturers give their trucks specific ratings after extensive testing. Tow ratings are based on the capacity of a truck's engine, transmission, and brakes to safely handle the weight of a loaded trailer. Truck manufacturers calculate how much a truck can safely accelerate and stop before assigning a tow rating. For Gross Weight Ratings, the truck's tires, frame, and suspension must be able to bear the load. It's important to never exceed the ratings assigned by the truck, trailer, or hitch manufacturers for the specific equipment you are using.

Gooseneck hitches should be tested for strength and durability and rated according to SAE J-2638.

## FINDING MANUFACTURER WEIGHT LIMITS

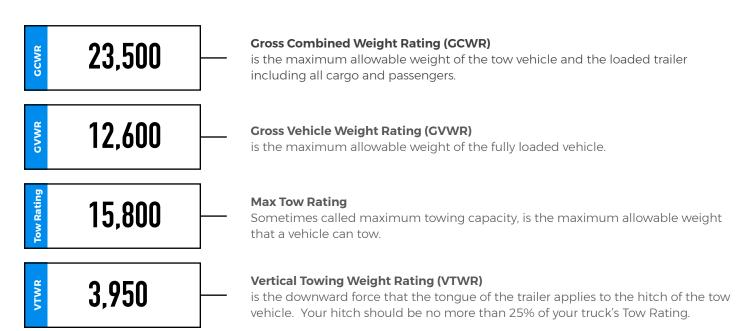

## FINDING YOUR ACTUAL WEIGHTS

Take your loaded truck and loaded trailer to a scale at a truck stop, quarry, or material supply center. For a small fee you can weigh your tow vehicle and trailer on their scale.

