






## Will Your Motorcycle Work With The Biker Bar?

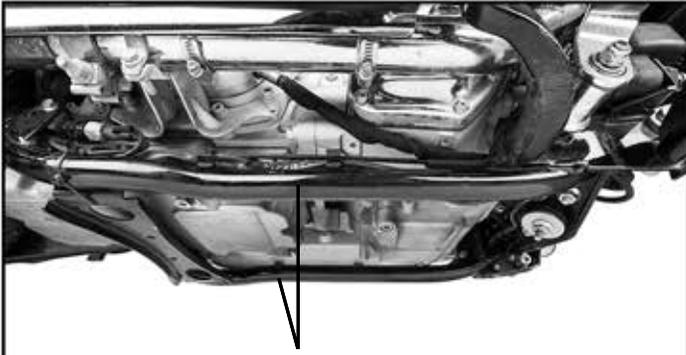


A two piece motorcycle tube frame is needed for the Biker Bar to clamp onto. The diameter of each frame tube must be at least 1.125" and no more than 1.5"

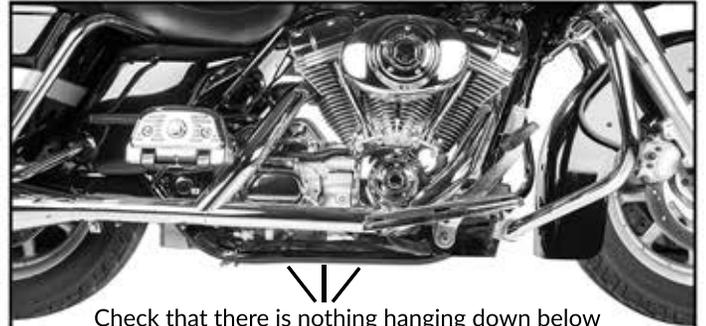

Check that there is nothing hanging down below the tube frame, such as a motor, transmission or exhaust. With the rider sitting on the motorcycle, the distance from the side of the frame tubes to the ground must measure between 5" & 6.5".

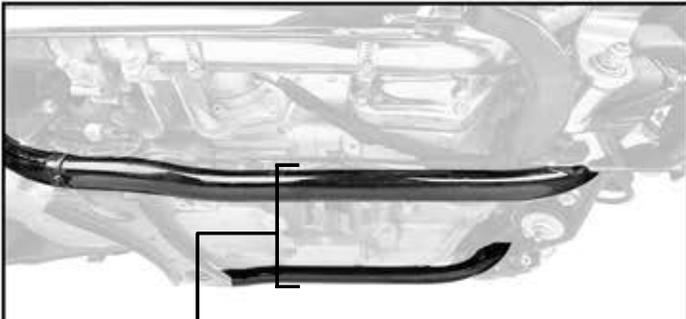

Distance from the outside edges of each frame tube must be no less than 10" and not more than 14.5". Take this measurement where the Biker Bar will be attached.

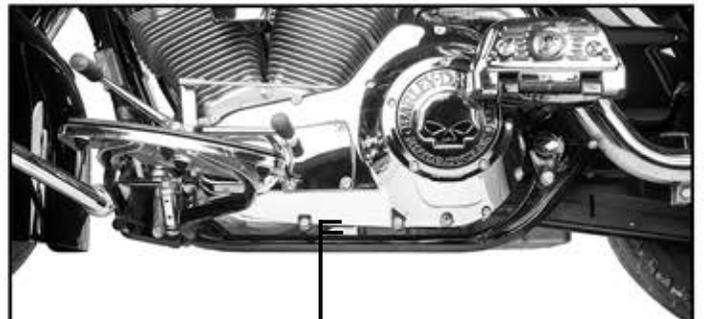

There must be 1/2" of clearance between the motor, transmission, and the primary drive to allow clearance for the Biker Bar clamps.

The Biker Bar will work with all stock Harley Davidson motorcycles with factory painted frames. The Biker Bar will also work with select models of motorcycles from other manufacturers. The above images and information will help determine if the Biker Bar will work with your motorcycle.